

# PARTS INDEX

## A

A/C MAIN RELAY .....	U- 67
ACCELERATOR CABLE .....	F2- 37
ACTUATOR (AAS) .....	R- 34
ACTUATOR .....	T- 77
AIR CONTROL VALVE .....	F1-67, 68
AIR CONTROL VALVE .....	F2-63, 64
AIR PUMP .....	F1-65, 66
AIR PUMP .....	F2- 61
AIR SUPPLY VALVE .....	F2- 39
AIRFLOW METER .....	F1- 82
AIRFLOW METER .....	F2- 80
ALTERNATOR .....	G-6, 12, 17
ANTI-LOCK BRAKES (ABS) .....	P- 52
APEX SEAL .....	C- 44
AUDIO COMPONENT ASSEMBLY .....	T-92, 108
AUTOMATIC TRANSMISSION .....	K-47, 50, 134, 149

## B

BACK-UP LIGHT AND 5TH SWITCH .....	F1- 86
BACK-UP LIGHT AND 5TH SWITCH .....	F2- 84
BACK-UP LIGHT .....	T-54, 58
BATTERY .....	G- 5
BLOWER MOTOR .....	U- 31
BLOWER UNIT .....	U- 30
BRAKE PEDAL .....	P-10, 11
BYPASS AIR CONTROL VALVE .....	F1- 41
BYPASS AIR CONTROL VALVE .....	F2- 39

## C

CARGO ROOM LAMP .....	T- 65
CHARCOAL CANISTER .....	F1- 70
CHARCOAL CANISTER .....	F2- 66
CHECK-AND-CUT VALVE .....	F1-69, 70
CHECK-AND-CUT VALVE .....	F2-65, 66
CHECK VALVE .....	F2- 37
CIRCUIT OPENING RELAY .....	F1- 57
CIRCUIT OPENING RELAY .....	F2- 53
CLUSTER SWITCH. T-17, 18, 19, 23, 24, 25, 26	
CLUTCH COVER .....	H-14, 16
CLUTCH DISC .....	H-14, 17
CLUTCH MASTER CYLINDER .....	H-7, 8, 9
CLUTCH PEDAL .....	H-5, 6
CLUTCH RELEASE CYLINDER .....	H-8, 11, 12
CLUTCH SWITCH .....	F1- 86
CLUTCH SWITCH .....	F2- 84
CLUTCH SWITCH .....	T- 77
COIL WITH IGNITER .....	G-28, 30
COMPRESSOR .....	U-46, 47, 56, 63
CONDENSER .....	U-64, 65
CONTROL LINK .....	R- 28
CONVERTIBLE TOP .....	S-74, 77, 80, 89, 102

COOLING FAN .....	E-6, 7
COOLING UNIT .....	U-43, 44
CORNER SEAL .....	C- 45
CPU .....	T- 32
CRANK ANGLE SENSOR .....	G- 32
CRUISE CONTROL SWITCH .....	T-17, 18
CRUISE CONTROL UNIT .....	T-75, 76

## D

DASHPOT .....	F1- 72
DASHPOT .....	F2- 68
DAYTIME RUNNING LIGHTS .....	T-52, 61
DIFFERENTIAL .....	M-18, 19, 20, 21, 24
DIMMER RELAY .....	T- 51
DOOR .....	S-43, 46
DOOR KEY CYLINDER SWITCH .....	T- 83
DOOR LOCK CYLINDER LIGHT .....	T- 54
DOOR LOCK SWITCH .....	T- 83
DOOR SWITCH .....	T- 83
DOOR WOOFER AMPLIFIER .....	T-111, 112
DOOR WOOFER SPEAKER .....	T-110
DRIVE BELT .....	C- 5
DRIVESHAFT .....	M-14, 15
DUTY SOLENOID VALVE .....	F2- 41

## E

EC-AT CONTROL UNIT .....	K- 42
ECCENTRIC SHAFT .....	C-46, 52
ECCENTRIC SHAFT BYPASS VALVE .....	D- 15
ECCENTRIC SHAFT PULLEY .....	C-69, 76
ECPS CONTROL UNIT .....	N- 27
ELECTRIC COOLING FAN .....	E- 13
ENGINE CONTROL UNIT .....	F1- 78
ENGINE CONTROL UNIT .....	F2- 76
ENGINE .....	C-11, 21, 39, 47, 80
EVAPORATOR .....	U- 45
EX-HI RELAY .....	U- 32
EXHAUST DEVICES .....	F1- 59
EXHAUST DEVICES .....	F2- 55
EXPANSION VALVE .....	U- 44

## F

FAN RELAY .....	E- 13
FLYWHEEL .....	H-14, 17
FRONT AXLE .....	M-6, 8
FRONT BUMPER .....	S- 24
FRONT DISC BRAKES .....	P-35, 38
FRONT FOG LIGHT .....	T- 61
FRONT FOG LIGHT RELAY .....	T- 52
FRONT FOG LIGHT SWITCH .....	T- 27
FRONT HOUSING .....	C-39, 50
FRONT LOWER ARM .....	R- 14

# PARTS INDEX

FRONT ROTOR..... C-42, 52  
 FRONT ROTOR HOUSING..... C-42, 53  
 FRONT SHOCK ABSORBER..... R-11, 12  
 FRONT SPEAKER..... T-110  
 FRONT STABILIZER..... R- 17  
 FRONT STATIONARY..... C- 40  
 FUEL LID OPENER..... S- 28  
 FUEL PUMP RESISTOR RELAY..... F1- 57  
 FUEL PUMP RESISTOR RELAY..... F2- 53  
 FUEL PUMP..... F1-52, 53  
 FUEL PUMP..... F2-48, 49  
 FUEL TANK..... F1- 51  
 FUEL TANK..... F2- 47  
 FUSE BOX..... T- 15

## H

HEADLIGHT..... T-55, 56, 57  
 HEADLIGHT RELAY..... T- 51  
 HEADLINER AND GARNISH..... S- 21  
 HEADREST SPEAKER..... T-109, 110  
 HEADREST SPEAKER AMPLIFIER..... T-112  
 HEADREST SPEAKER SWITCH..... T-112  
 HEADREST SPEAKER SWITCH..... T-112, 113  
 HEAT HAZARD SENSOR..... F1- 85  
 HEAT HAZARD SENSOR..... F2- 83  
 HEATER CORE..... U- 35  
 HEATER RELAY..... U- 32  
 HEATER UNIT..... U- 34  
 HIGH-MOUNT STOPLIGHT..... T- 58  
 HIGH-TENSION LEADS..... G- 27  
 HOLD SWITCH..... K- 39  
 HOOD AND HOOD LOCK..... S-22, 23  
 HOOD SWITCH..... T- 83  
 HORN..... S- 65  
 HYDRAULIC UNIT..... P-63, 65

## I

IGN RELAY..... U- 32  
 IGNITION KEY CYLINDER LAMP..... T- 63  
 IGNITION SWITCH AND  
 KEY REMINDER SWITCH..... T- 17  
 IGNITION SWITCH..... T- 17  
 INDICATOR PANEL..... K-164  
 INHIBITOR SWITCH..... K-39, 40  
 INJECTOR (PRIMARY)..... F2-50, 51, 52  
 INJECTOR (SECONDARY)..... F2-50, 51, 52  
 INJECTOR..... F1-54, 55, 56  
 INJECTOR..... F2-50, 52  
 INNER OIL SEAL..... C- 43  
 INSTRUMENT CLUSTER..... T-35, 36, 38  
 INSTRUMENT PANEL..... S-8, 10  
 INTAKE AIR THERMOSENSOR..... F1- 82  
 INTAKE AIR THERMOSENSOR..... F2- 80  
 INTERLOCK CABLE..... K-162, 163

INTERLOCK SWITCH..... G- 26  
 INTERMEDIATE HOUSING..... C-39, 54

## K

KNOCK SENSOR..... F2-72, 82

## L

LATERAL LINK..... R- 26  
 LICENCE LIGHT..... T- 58  
 LOCKUP CONTROL SOLENOID VALVE... K- 41  
 LOGICON SWITCH..... U-21, 22, 23

## M

MAIN FUSE BLOCK..... T- 15  
 MAIN RELAY..... F1- 85  
 MAIN RELAY..... P- 71  
 MASTER CYLINDER..... P-13, 15, 17, 21  
 METERING OIL PUMP..... D- 17  
 MILEAGE SENSOR..... F1- 86  
 MODE CONTROL ACTUATOR..... U- 35  
 MOLDING, PROTECTOR, AND GARNISH S- 63  
 MOLDING..... S- 63

## N

NEUTRAL SWITCH..... F1- 85  
 NEUTRAL SWITCH..... F2- 84

## O

OIL COOLER(S)..... K-154  
 OIL COOLER..... D- 14  
 OIL FILTER..... D- 6  
 OIL NOZZLES..... D- 19  
 OIL PAN..... D-7, 8  
 OIL PRESSURE CONTROL VALVE..... D- 15  
 OIL PRESSURE SWITCH..... F1- 86  
 OIL PUMP..... D-9, 10, 11, 12  
 OIL PUMP (ECPS)..... N-22, 23  
 OIL PUMP (ESPS)..... N-14, 15  
 OUTER OIL SEAL..... C- 43  
 OXYGEN SENSOR..... F1-83, 84  
 OXYGEN SENSOR..... F2-81, 82

## P

P RANGE SWITCH..... K-157  
 P/S PRESSURE SWITCH..... F1- 86  
 P/S PRESSURE SWITCH..... F2- 84

# PARTS INDEX

PARKING BRAKE CABLE..... P- 51  
 PARKING BRAKE LEVER..... P-49, 50  
 POWER ANTENNA RELAY ..... S-104, 106  
 POWER ANTENNA ..... T-104, 106  
 POWER BRAKE UNIT .. P-24, 26, 27, 28, 30, 32  
 POWER TRANSISTOR ..... U- 33  
 PRESSURE REGULATOR ..... F1- 53  
 PRESSURE REGURATOR..... F2- 49  
 PRESSURE SENSOR..... F1- 84  
 PRESSURE SENSOR..... F2- 82  
 PROPELLER SHAFT ..... L- 2  
 PROPORTIONING BYPASS VALVE  
 (PBV)..... P-33, 34

## R

RADIATOR..... E- 7  
 RADIATOR CAP ..... E- 6  
 REAR AXLE..... M-10, 12  
 REAR BUMPER ..... S-26, 27  
 REAR COMBINATION LIGHT LENS..... T- 60  
 REAR DEFROSTER RELAY ..... T- 24  
 REAR DISC BRAKES..... P-43, 46  
 REAR HATCH ..... S-28, 30  
 REAR HATCH GLASS..... S- 59  
 REAR HATCH KEY CYLINDER SWITCH... T- 83  
 REAR HATCH SWITCH..... T- 83  
 REAR HOUSING..... C-39, 56  
 REAR ROTOR ..... C- 42  
 REAR ROTOR HOUSING ..... C- 42  
 REAR SHOCK ABSORBER ..... R-20, 21  
 REAR SIDE MAKER LIGHT..... T- 58  
 REAR SPEAKER..... T-110, 111  
 REAR STABILIZER ..... R- 29  
 REAR STATIONARY GEAR..... C- 40  
 REAR WINDOW DEFROSTER ..... T-67, 68  
 REAR WINDOW DEFROSTER RELAY..... T- 24  
 REAR WINDOW DEFROSTER SWITCH T-17, 67  
 REAR WIPER AND WASHER ..... S-28, 40  
 REC/FRESH SELECT ACTUATOR ..... U- 31  
 RECEIVER/DRIER..... U-65, 66  
 REFRIGERANT PRESSURE SWITCH..... U- 66  
 RELEASE BEARING..... H-14, 16  
 RELEASE FORK..... H-14, 16  
 REMOTE CONTROL MIRROR..... S-31, 32  
 ROOM LAMP..... T- 65

## S

SEAT..... S-11, 12  
 SEAT BELT..... S-14, 17, 18, 20  
 SECURITY LAMP..... T- 84  
 SELECTOR KNOB ..... K-162, 164  
 SELECTOR LEVER..... K-158, 159, 161, 165  
 SELECTOR LEVER..... K-162, 163, 165  
 SHIFT-LOCK ACTUATOR ..... K-157

SIDE SEAL..... C- 45  
 SLIDING SUNROOF ..... S-67, 68, 70, 71  
 SOLENOID VALVE (6PI)..... F1- 44  
 SOLENOID VALVE  
 (ACCELERATED WARM-UP SYSTEM)... F1- 41  
 SOLENOID VALVE (PRC)..... F1- 58  
 SOLENOID VALVE (PRC)..... F2- 54  
 SOLENOID VALVE (RELIEF)..... F1- 64  
 SOLENOID VALVE (RELIEF)..... F2- 59  
 SOLENOID VALVE (SWITCH)..... F1- 63  
 SOLENOID VALVE (SWITCH)..... F2- 60  
 SOLENOID VALVE (VDI)..... F1- 47  
 SOLENOID VALVES..... K- 41  
 SPARK PLUGS..... G- 27  
 SPEED SENSOR..... K- 41  
 SPEED SENSOR..... T- 36  
 SPEED SENSOR AND ROTOR ..... P-67, 68, 70  
 STARTER..... G-18, 19, 24, 25  
 STEERING GEAR AND LINKAGE  
 (ECPS)..... N-12, 13  
 STEERING GEAR AND LINKAGE (ESPS) N-12, 13  
 STEERING LOCK ASSEMBLY ..... N- 11  
 STEERING SHAFT ..... N- 11  
 STEERING WHEEL ..... N- 10  
 STOP AND ROOM LAMP..... T- 64  
 STOP AND TAILLIGHT..... T-52, 58  
 STOPLIGHT SWITCH..... T- 52  
 STOPLIGHT SWITCH..... T- 77  
 SUBFRAME ..... R- 31  
 SUBLINK ..... R- 28

## T

TEMPERATURE CONTROL ACTUATOR... U- 36  
 THEFT-DETERRENT CONTROL UNIT ..... T- 80  
 THERMOSTAT ..... E- 12  
 THERMOSWITCH ..... U- 45  
 THROTTLE BODY ..... F2-35, 36  
 THROTTLE SENSOR ..... F1- 83  
 THROTTLE SENSOR ..... F2- 81  
 TIE-ROD END..... N- 6  
 TRAILING ARM ..... R- 23  
 TRANSMISSION  
 (NON-TURBO)..... J1-9, 11, 21, 24, 43  
 TRANSMISSION (TURBO)..... J2-10, 12, 23, 26  
 TRIM..... S- 21  
 TRUNK LID..... S-34, 35  
 TRUNK ROOM LAMP..... T- 65  
 TURBINE SENSOR..... K- 40  
 TURN AND HAZARD LIGHT..... T- 53  
 TURN CANCEL AND ANGLE SENSOR T-29, 30

## W

WARNING AND CLOCK ..... T-43, 45  
 WATER PUMP ..... E- 8

# PARTS INDEX

WATER THERMOSENSOR.....	F1- 83
WATER THERMOSENSOR.....	F2- 81
WATER THERMOVALVE.....	F2- 36
WHEELS AND TIRES.....	Q- 4
WINDSHIELD ANTENNA.....	T-107
WINDSHIELD WIPER AND WASHER.....	S-36, 37, 38, 40
WINDSHIELD.....	S-55, 56